



 
STEEL STRAPPING TOOL SET

MANUAL NO. 7912



OPERATION

1. Wrap the steel strap around the package and insert the straps into the seal.

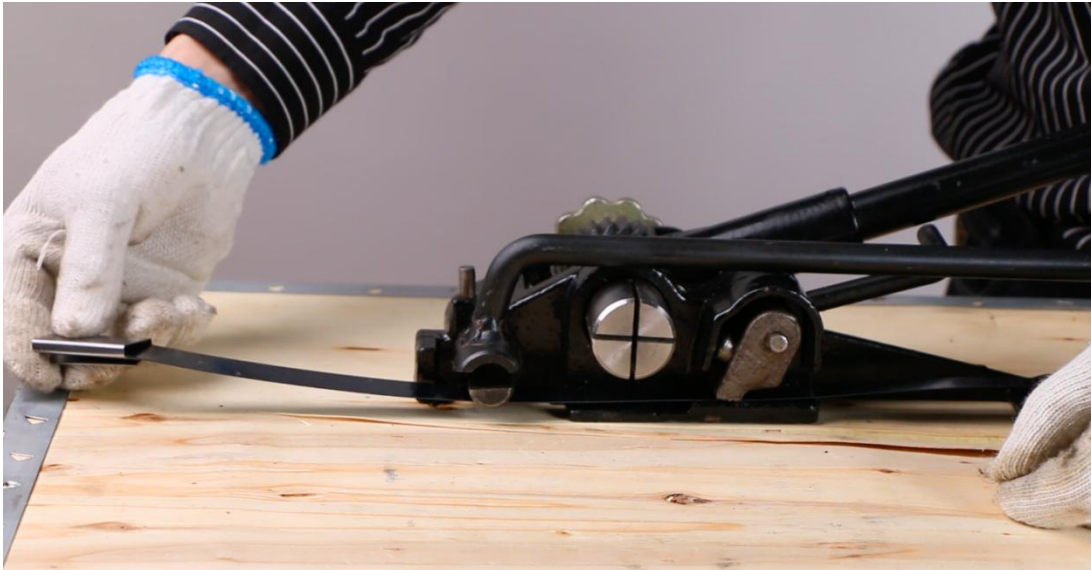




2. Insert the strapping into the cutter groove and spindle groove.



 
3.Swing the handle back and forth with your right hand until the strapping is pulled tight.

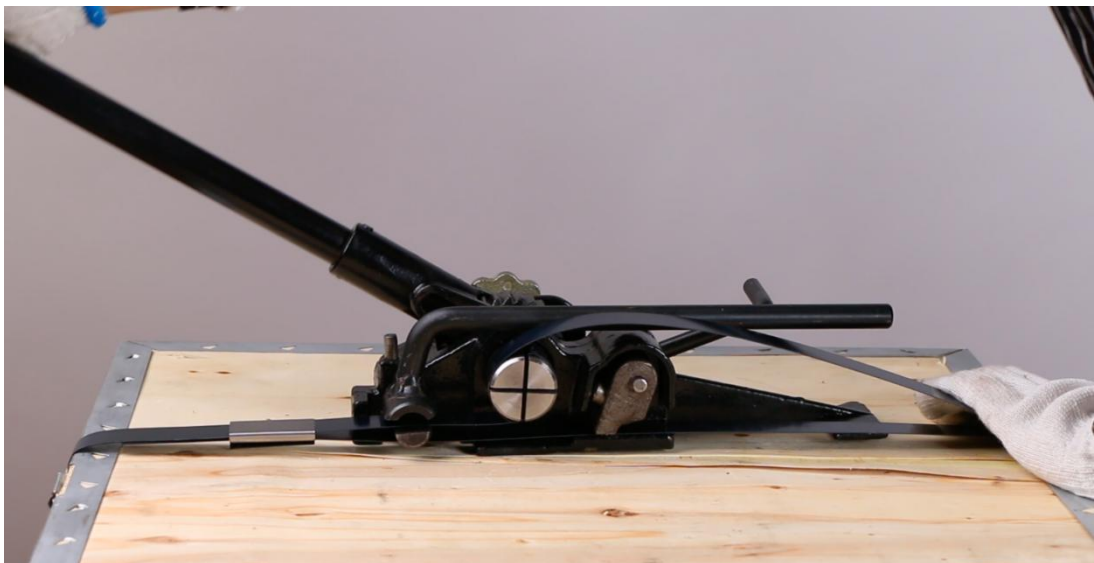

4. Place the sealer tool fully open over the buckle, then close the handle so that the buckle is fully clamped, then remove the sealer tool.



 5. Press the handle of the tensioner to cut the strapping, and press the handle to move the tool to the right until it is removed from the strapping.

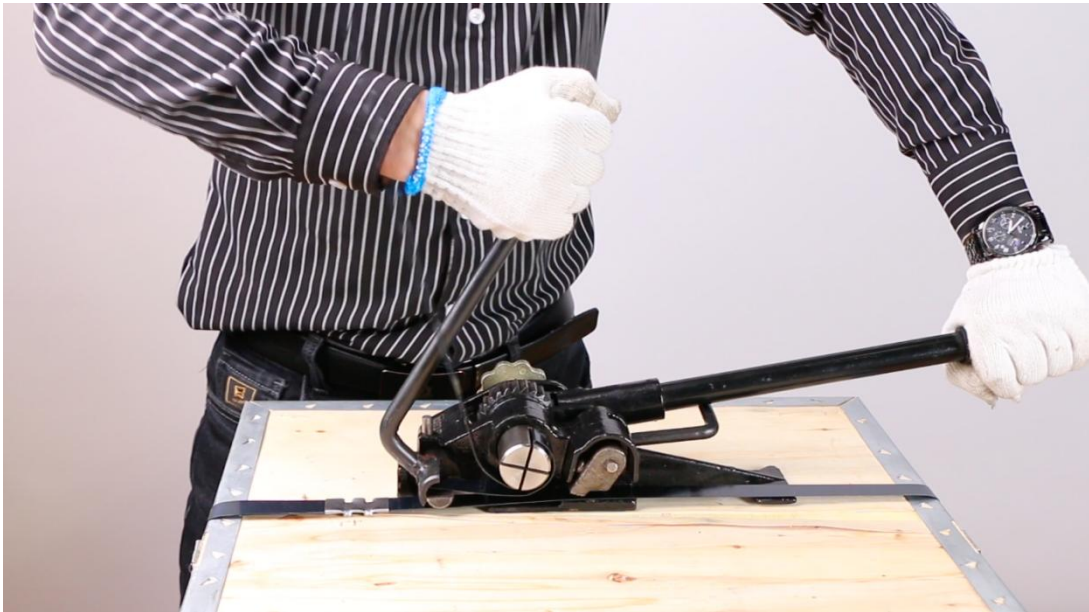

6.If you are not satisfied with the packaging, as shown in the picture, you can use the steel strip scissors we prepared for you to cut the steel strip.



Contact

Feel free to visit our website:

www.ussolid.com

You can email us at: service@ussolid.com