




PP STRAPPING TOOL

MANUAL NO. 11976

SKU: JFESM00043



SCAN FOR VIDEO TUTORIAL

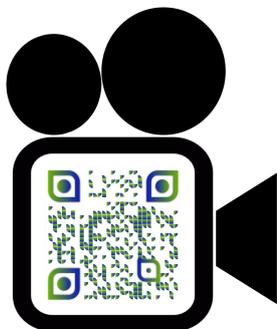

Watch Video

FIND QUICK ANSWERS



CONTENTS

SPECIFICATION	1
GENERAL INFORMATION	2
SAFETY INSTRUCTIONS	3
OPERATION	4

SPECIFICATION

MODEL	USS-ESM00043
APPLICABLE PACKING STRAPPING	PP STRAPPING
APPLICABLE STRAPPING SIZE	WIDTH: 1/2"
SEALING METHOD	BUCKLE
WEIGHT	5.18 lbs

GENERAL INFORMATION

These operating instructions are intended to help familiarization with the strapping tool and the possibilities of its use for the intended purpose. The operating instructions contain important information concerning the safe, proper, and efficient use of the strapping tool. Studying the information will help to avoid danger, reduce repairs and stoppages, and increase the reliability and service life of the strapping tool.

The operating instructions must always be available at the place of operation of the strapping tool. They must be read and studied by people working with the strapping tool. This work specifically includes operation, refilling of the operating material, fault elimination, and maintenance.

In addition to the operating instructions and the regulations for accident prevention effective in the country of use and place of application, the recognized technical regulations for safety and proper working must also be observed.

SAFETY INSTRUCTIONS

Use for the intended purpose:

- √ The tool is intended for strapping packages, pallet loads, etc.
- √ This tool was designed and manufactured for safe handling during the strapping operation.
- √ The tool only processes PP straps.

Possible misuse:

Plastic strapping is not suitable for this machine.



Before using the tool, read the operating instructions carefully.



Do not put your fingers into the tension wheel area.



When operating the tool, wear your eye, face, and hand protection (cut-proof gloves).



Do not put your hands or other parts of the body between the strap and the package during the strapping process.



When cutting the strap hold the upper portion and stand safely away from the strap. Caution: the lower strap will snap forward.




Original spare parts must be used exclusively. Not using original spare parts will end the warranty and the limited liability.




Do not stand in line with the strap while it is tensioned. The strap could break.

OPERATION


1. Wrap the strapping around the item once, then insert one end of the strapping into the base of the machine (the end of the strapping should be embedded in the base and must not extend beyond it). Press the circular rod down to secure the strapping.

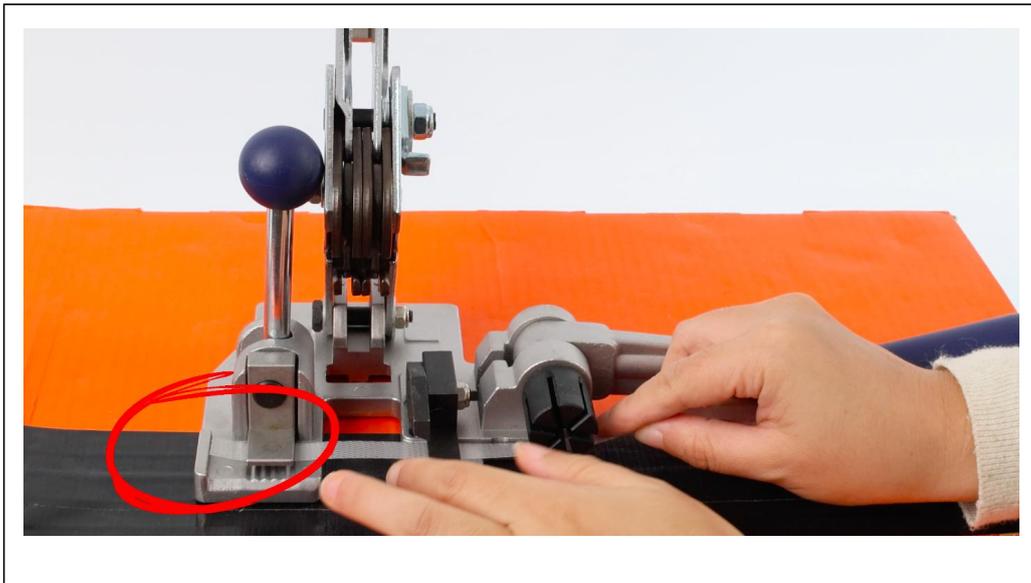


2. Insert the other end of the strapping into the upper slot.

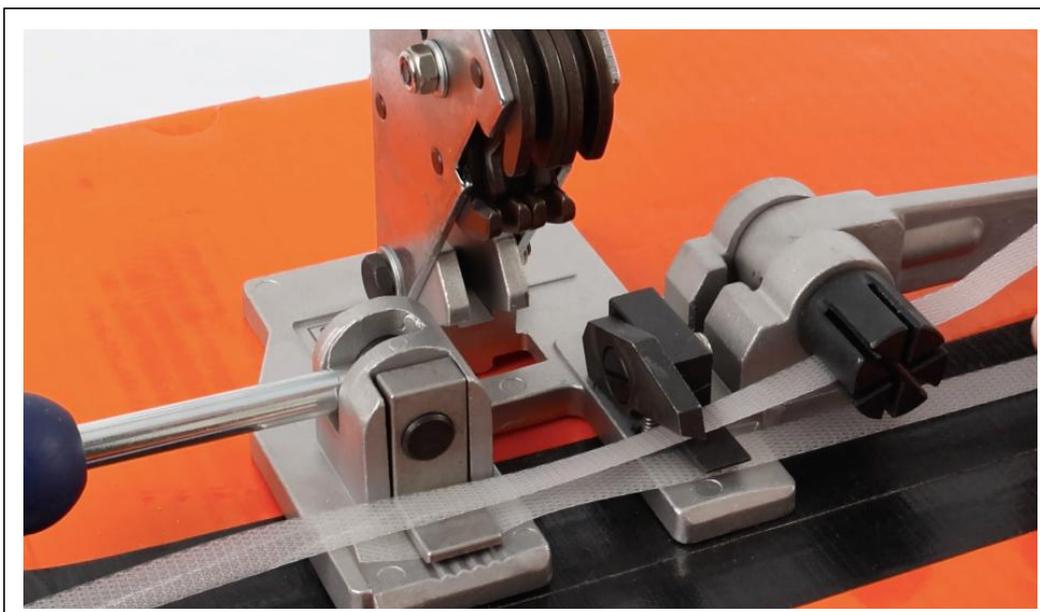

3. Crank the long handle until the strapping is tightened.

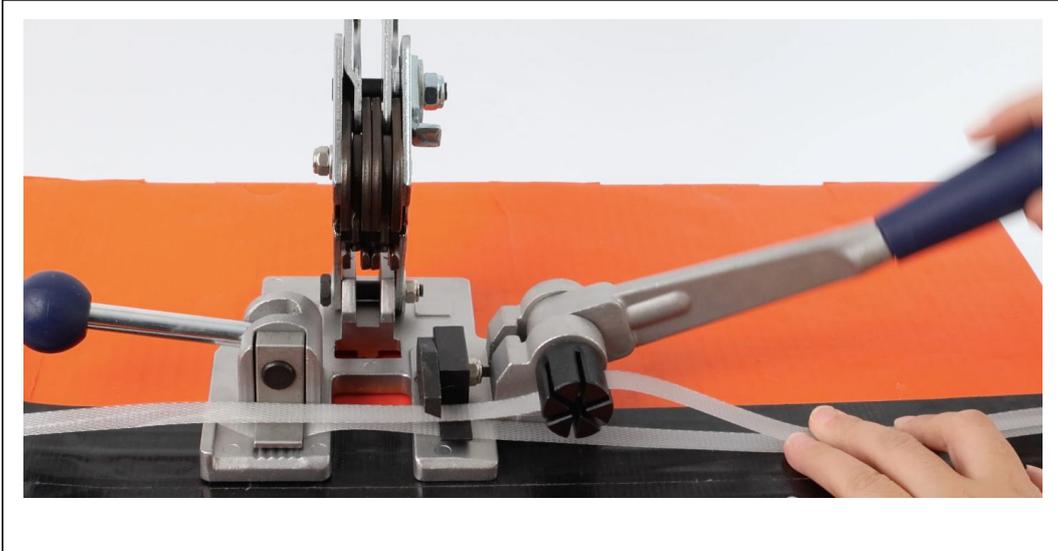


4. Place the buckle onto the strapping.

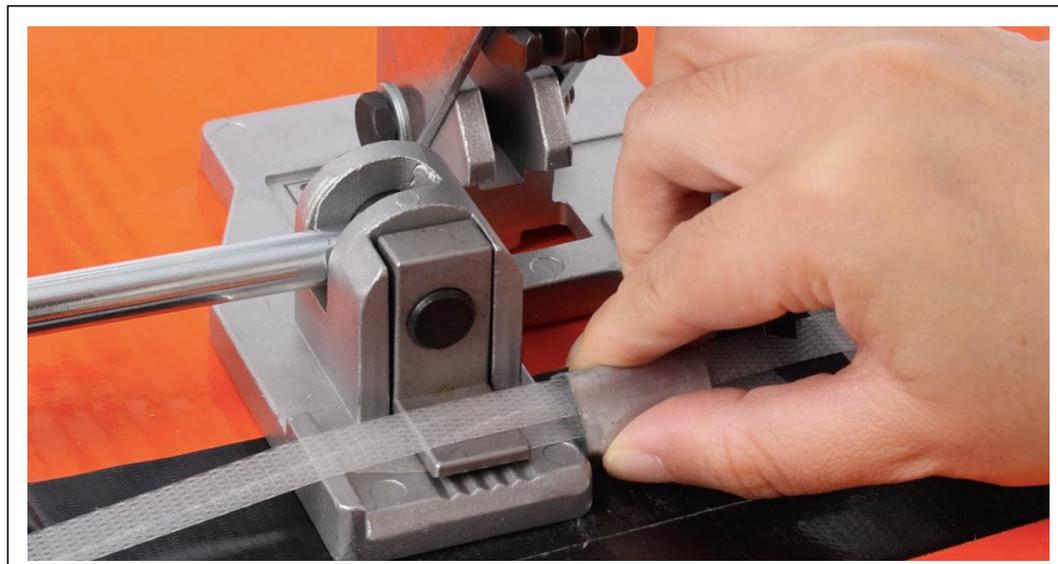

5. Lower the clamping jaw to secure the buckle and cut off the excess strapping.



6. Lift the circular rod and remove the machine. The packing process is now complete.

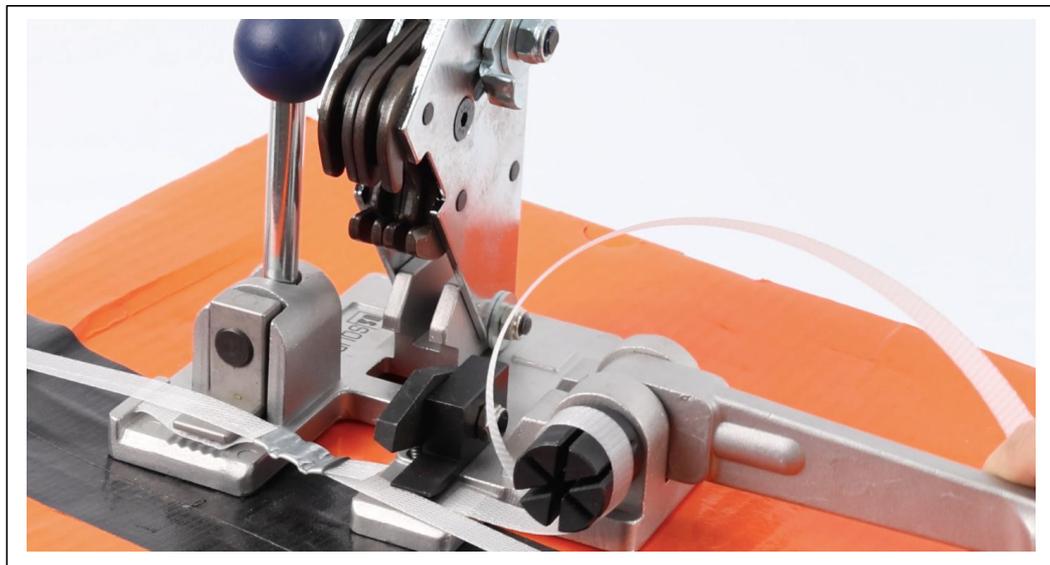

Contact

Feel free to visit our website: www.ussolid.com

You can email us at: service@ussolid.com