



STEEL STRAPPING TOOL

MANUAL NO. 14483

SKU: JFESM00063




OPERATION


1. Place the metal strapping tape on the items to be packed, and press the handle and body of the machine with your hands to lift the pressure wheel then press the strapping tape into the fuselage.




2. Swing the machine handle until the steel strap is tightened, and then press the machine handle to a lower position. (It is not recommended to press the machine handle to an extremely low position, otherwise, the pressing wheel will be lifted and the packing iron sheet will be loosened).

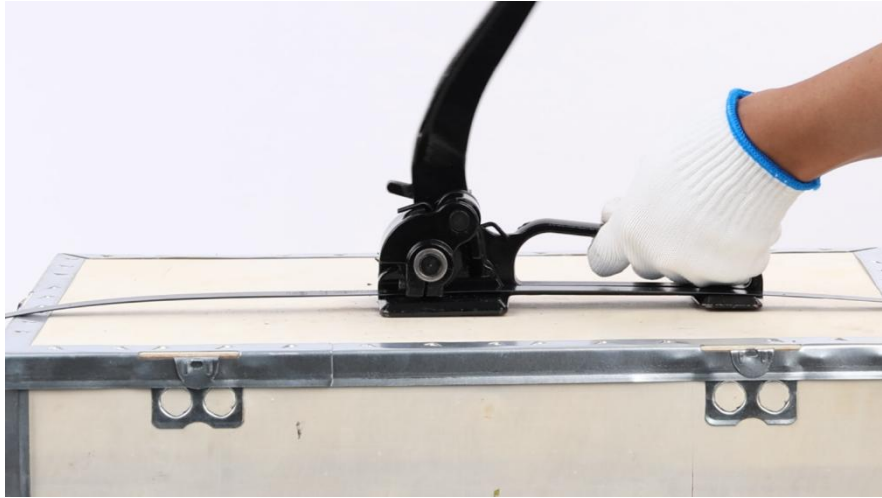

3. Place the strapping buckle on the iron belt and once the desired tension is reached, seal it with pliers.

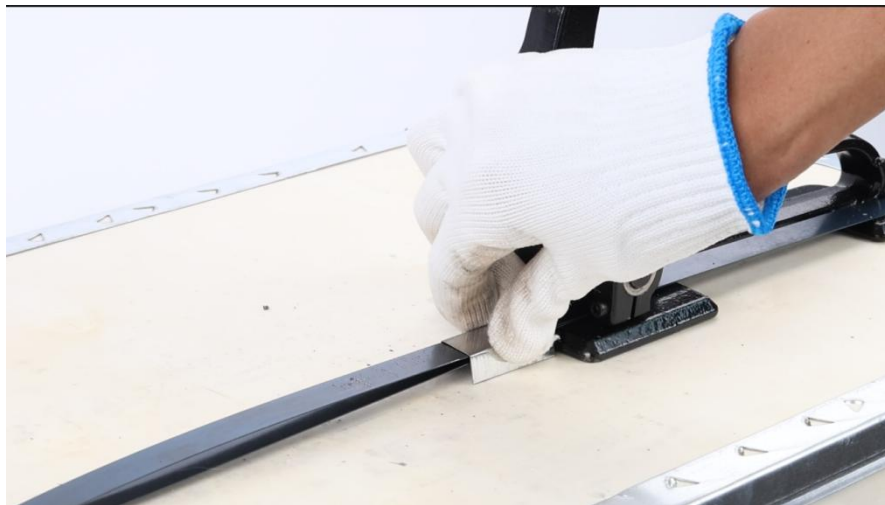

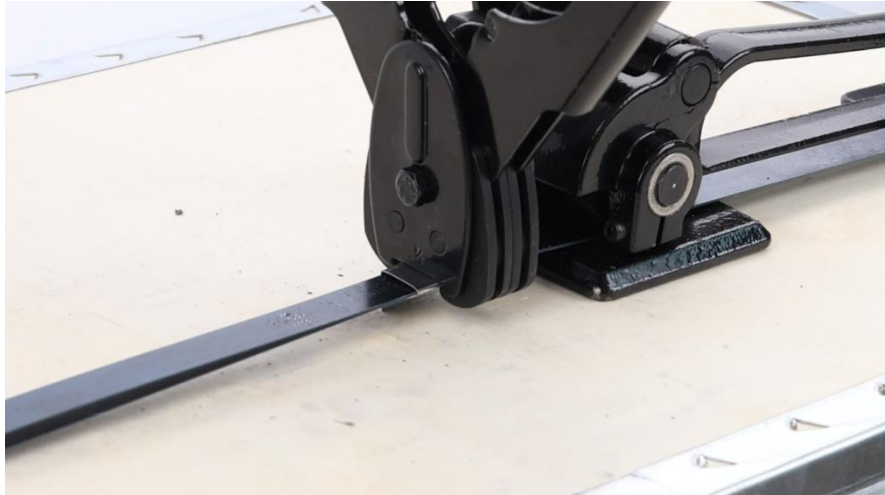

4. Use your thumb to press the tensioner's small button to release the pull rod, then squeeze the pull rod against the machine body to raise the pressure wheel, and the baler can be moved right.





5. You can use the steel strip scissors to cut the extra steel strip.



Contact

Feel free to visit our website:

www.ussolid.com

You can email us at service@ussolid.com