



# STEEL STRAPPING TOOL

MANUAL NO. 14734

SKU:JFESM00068




# OPERATION


1. Place the metal strapping tape on the items to be packed, and press the handle and body of the machine with your hands to lift the pressure wheel then press the strapping tape into the fuselage.



2. Swing the machine handle until the steel strap is tightened, and then press the machine handle to a lower position. (It is not recommended to press the machine handle to an extremely low position, otherwise, the pressing wheel will be lifted and the packing iron sheet will be loosened).

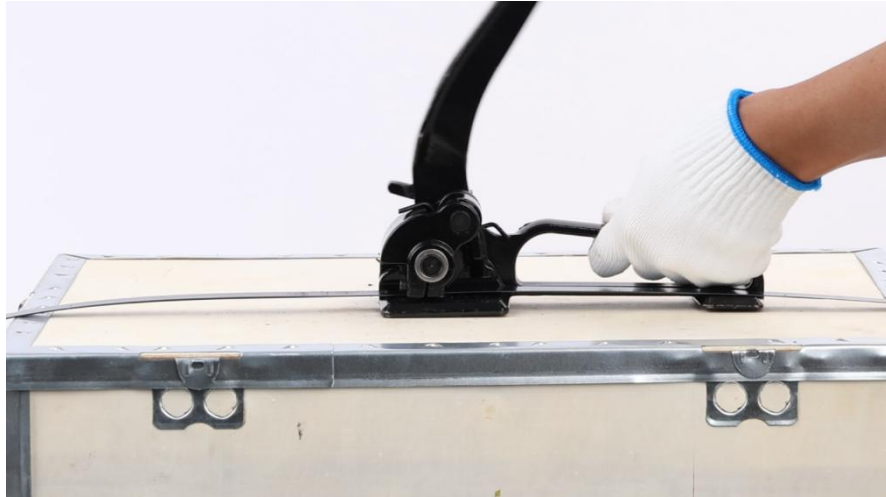

3. Place the strapping buckle on the iron belt and once the desired tension is reached, seal it with pliers.

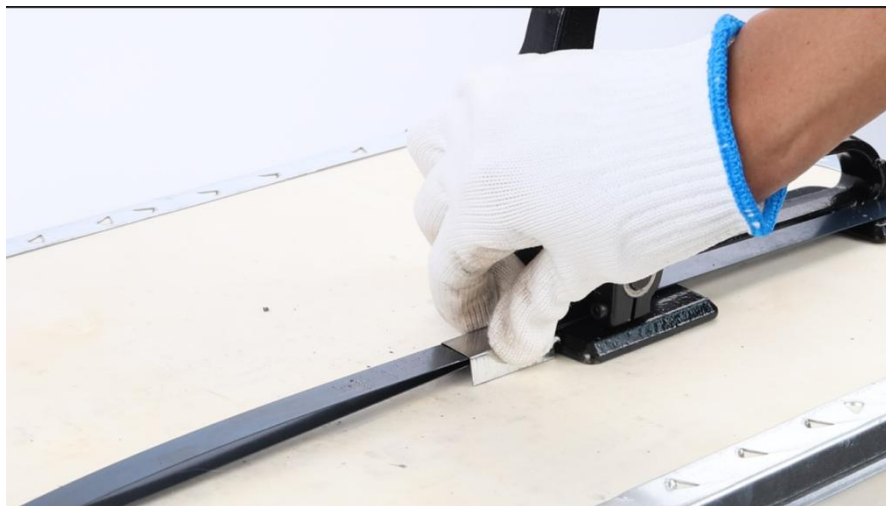

4. First press the small button on the tensioner body to reset the pull rod. Then use your thumb to press the pawl handle on the machine handle forward, and then squeeze the machine handle and the machine body together, so that the pressure wheel rises and the baler can be moved to the right.



5. If you are not satisfied with the result, you can use the steel strip scissors to cut the steel strip and re-attempt - see picture for illustration.



## Contact

Feel free to visit our website:

[www.ussolid.com](http://www.ussolid.com)

You can email us at [service@ussolid.com](mailto:service@ussolid.com)