




Label Rewinder

User Manual

(Manual No. 7190)

Model: USS-LRW00009/10/12/13/14

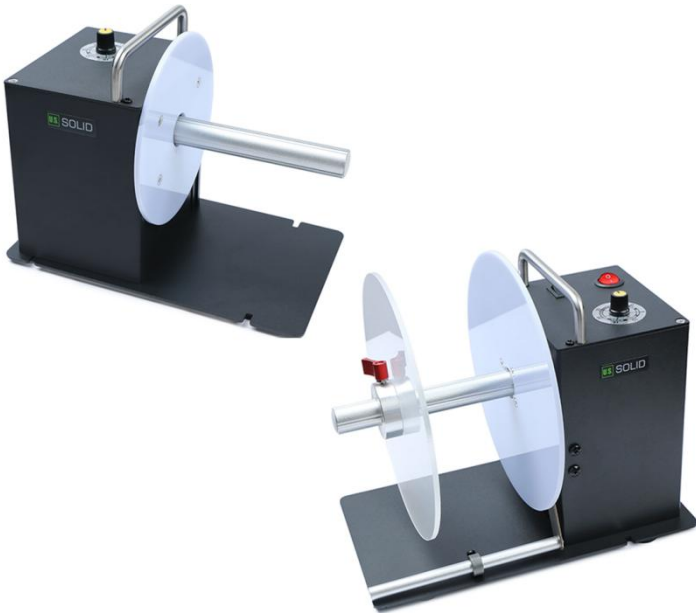

This manual should be made available to all users of this equipment. For best results and maximum durability of the equipment, carefully read and follow all instructions.

Version2.0©202407

For questions or concerns, e-mail service@ussolid.com, visit www.ussolid.com

Table of Contents

I. Product Specifications.....	2
II. Package List.....	3-4
III. Machine Introduction.....	5
IV. Operating Instructions.....	6
V. Notice.....	7
VI. Warning.....	6

I. Product Specifications

MODEL	LRW00009	LRW00012	LRW00010	LRW00013
Max. Label Width	3.15" (80 mm)	3.15" (80 mm)	4.72" (120 mm)	6.3" (160 mm)
Max. Label Roll Diameter	5.43" (138 mm)	5.43" (138 mm)	7.87" (200 mm)	8.66" (220 mm)
Max. Label Roll Weight	2.2 lbs. (1 kg)		4.4 lbs. (2 kg)	
Core Diameter	1"(25mm)&1.57"(40mm) & coreless		1"(25mm)&1.57" (40mm)& 3"(76mm)& coreless	
Rewind Direction	one-way	bi- directional	bi- directional	bi- directional
Voltage	AC 100V-240V, 50/60Hz			

MODEL	LRW00014
Max. Label Width	4.72" (120 mm)
Max. Label Roll Diameter	7.87"(200 mm)
Max. Label Roll Weight	4.4 lbs (2 kg)
Core Diameter	1"(25mm)&1.5"(38mm/40mm) &3"(76mm)& coreless
Rewind Direction	bi-directional, 2 way
Voltage	AC 100V-240V, 50/60Hz

Please pay attention to the parameter Max. Label Roll Weight, do not overload the machine, otherwise the machine's service life will be shortened.

For questions or concerns, e-mail service@ussolid.com, visit www.ussolid.com

II. Package List

USS-LRW00009



- 1x Label Rewinder Machine
- 1x Power Adapter
- 1x 1.57" (40mm) Core Holder



- 1x USB Cable
- 1x U Pin(25mm)Core Holder
- 1x L-shaped Rod

USS-LRW00010/13




- 1x Label Rewinder Machine
- 1x U Pin(25mm) Core Holder
- 1x 3" (76mm) Core Holder
- 1x Stop Lever



- 1x Power Adapter
- 1x 1.57" (40mm) Core Holder
- 1x L-shaped Rod

USS-LRW00012

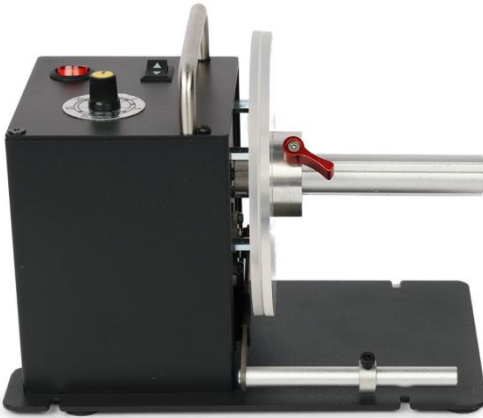

- 1x Label Rewinder Machine
- 1x U Pin(25mm) Core Holder
- 1x 3”(76mm) Core Holder

- 1x Power Adapter
- 1x 1.57” (40mm) Core Holder
- 1x L-shaped Rod


USS-LRW00014



- 1x Label Rewinder Machine
- 1x Power Adapter
- 1x U Pin(25mm) Core Holder
- 1x 1.57” (40mm) Core Holder
- 1x 3”(76mm) Core Holder
- 1x L-shaped Rod
- 1x Stop Lever

For questions or concerns, e-mail service@ussolid.com, visit www.ussolid.com

III. Machine Introduction

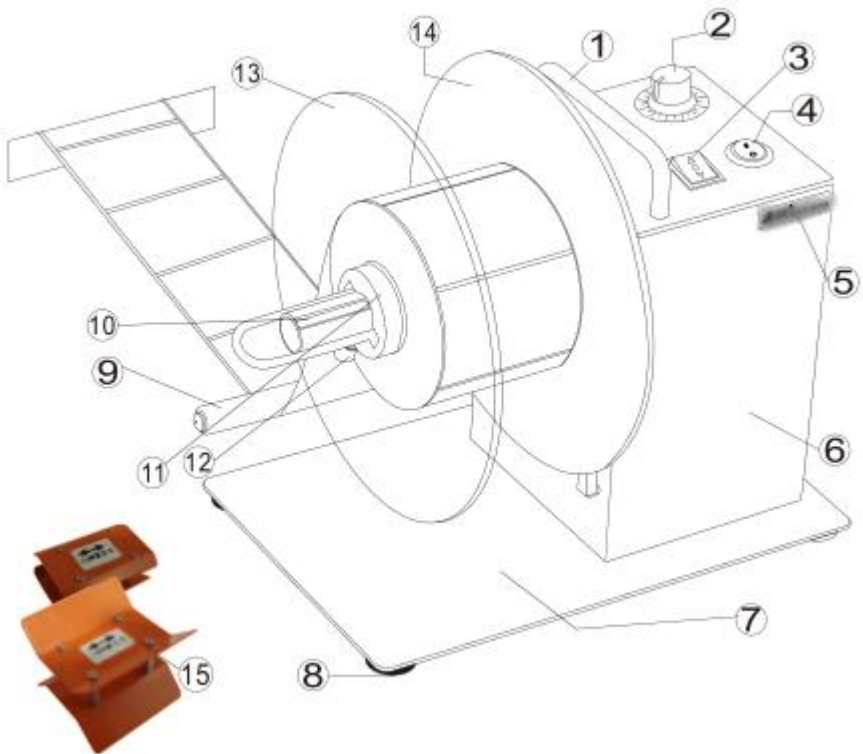

1.Handle

2. Speed Knob

3. Direction Switch

4. Power On/Off Switch

5. logo

6. Chassis

7.Base

8. non-slip feet

9. Stop Lever

10. multifunctional reel

11. Baffle holder

12. Quick lock screw

13. Front Flange Plate

14. Rear Flange Plate

15. Core Holder

IV. Operating Instructions

REWINDING LABELS

1. Select a rewinding direction you need (forward or backward rewinding).
2. Locate the rewinder and the printer as close as possible.
3. Choose one Core Holder according to your label core diameter, and insert it along the groove of the multifunctional reel.
4. Install your label paper tube on the Core Holder, pass the label web under the stop lever and pull it to the paper tube, finally along the rewinding direction and use a piece of tape to secure it in place.
5. Install the front flange plate (if you have) to guide the outer edge of labels and ensure an even roll.
6. Turn the Power Switch to ON position.
7. Start the printer and confirm that the labels are being rewound correctly. Keep the flange plate, label roll and printer as parallel as possible. You can adjust the Adjustable Speed Knob on the rewinding machine until the desired settings of the label feed are achieved.
8. When rewinding is finished, toggle the Power Switch to the OFF position, and pull the label roll back together with the Core Holder.
9. If the outer diameter size of your label roll is large, you can install a second Stop Lever (if you have) to assist in unwinding the material.

CORE SIZE OPTIONS

1. Rewind Directly "On-Shaft" (coreless): Use the L-shaped rod to suck the label and fix it on the groove of the multi-function reel. After the rewinding is completed, pull out the L-shaped rod back to easily take out the label roll.
2. 1"(25mm) Core: the U pin
3. 1.57" (40mm) Core: the small Core Holder
4. 3"(76mm) Core: the large Core Holder

V. Notice

1. Do not plug in, unplug the cord, or operate the machine with wet hands.
2. This product is only for indoor use and must not be used in wet locations.
3. During the operation of the machine, please do not touch the rewinder shaft, and never stop its rotation.
4. Turn off the power switch and unplug the machine before removing waste material or performing any cleaning or maintenance services.
5. The outer diameter of label roll should not exceed the outer diameter of the flange plate, and the rewinder must not be blocked for a long time.(The machine is in working state but is bound and cannot turn), otherwise the rewinding machine or power source will be damaged.

VI. Warranty

The machine's motor and circuit board have a 1 year warranty. This warranty covers any defects in material or workmanship under normal use.

Within 30 days from the date of delivery, U.S. Solid will either work with you to get your product working with the use of replacement parts, replace the product after receiving the returned defective machine, or accept a return for a full refund.

After the first 30 days but still within 1 year from the date of delivery, U.S. Solid will send new or refurbished replacement parts at no charge, so you can repair the product if necessary.



Environment protection first!

- Your appliance contains valuable materials which can be recovered or recycled.
- Leave it at a local civic waste collection point.