




# **LABEL REWINDER**

## **User Manual**

**(Manual No.8642)**

**Model: USS-LRW00017**

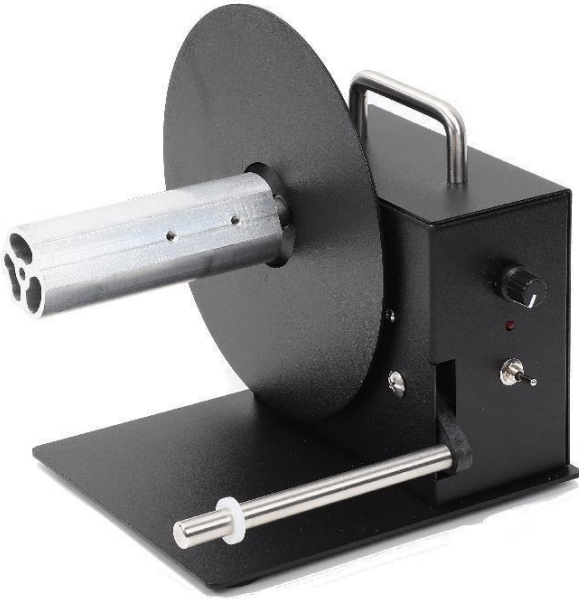


This manual should be made available to all users of this equipment. For best results, and for maximum durability of the equipment, carefully read and follow all instructions.

## I. Product Specifications

<b>MODEL</b>	USS-LRW00017
<b>Max. Label Width</b>	4.1" (105 mm)
<b>Max. Label Roll Diameter</b>	7"(180 mm)
<b>Max. Label Roll Weight</b>	4.4 lbs (2 kg)
<b>Core Diameter</b>	1.5" (38/40mm) & 3" (76mm) & coreless
<b>Rewind Direction</b>	bi-directional, 2 way
<b>Voltage</b>	AC 100V-240V, 50/60Hz

Please pay attention to the parameter Max. Label Roll Weight, do not overload the machine, otherwise the machine's service life will be shortened.

## II. Machine Introduction

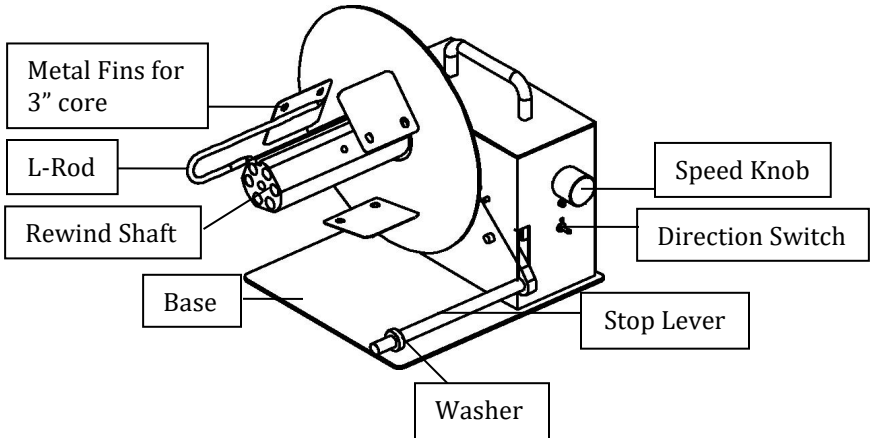

Pack List:

1x Automatic Label Rewinder; 1x Power Cable; 1x User Manual;  
1x L-shaped Rod; 3 x Metal Fins; 4 x Screws for the Fins

## III. Operating Instructions

### **Rewinding Labels**

1. Locate the rewinder and the printer as close as possible.
2. The default machine is equipped with a Fin that fits 1.57" (40mm) cores. If you want to use a 1.5-inch (38mm) cardboard core, simply remove the Fin from the Rewind Shaft and insert the cardboard core directly onto the Rewind Shaft.
3. For a 3-inch (76mm) cardboard core, you will need to remove the Fin from the Rewind Shaft and replace it with the 3 stainless steel Fins provided. The plastic bag includes the 3 Fins and 4 screws required for this replacement.
4. Pass the label web under the stop lever and pull it to the cardboard, and use a piece of tape to secure it in place.
5. Adjust the position of the washer on the stop lever to make it closer to the label, in order to secure the position of the label.
6. Turn the Power Switch to ON position.
7. Select a rewinding direction you need (forward or backward rewinding).
8. Start the printer and confirm that the labels are being rewound correctly. Keep the label roll and printer as parallel as possible. You can adjust the Adjustable Speed Knob on the rewinding machine until the desired settings of the label feed are achieved.
9. When rewinding is finished, toggle the Power Switch to the OFF position. Slide the cardboard core and the labels off the machine.

### **Rewind Directly "On-Shaft" ("coreless")**

Use the L-shaped rod to suck the label and fix it on the groove of the Rewind Shaft. After the rewinding is completed, pull out the L-shaped rod to easily take out the label roll.

## IV. Notice

1. Do not plug in, unplug the cord, or operate the machine with wet hands.
2. This product is only for indoor use and must not be used in wet locations.
3. During the operation of the machine, please do not touch the rewinder shaft, and never stop its rotation.
4. Turn off the power switch and unplug the machine before removing waste material or performing any cleaning or maintenance services.

## V. Warranty

The machine's motor and circuit board have a 1 year warranty. This warranty covers any defects in material or workmanship under normal use.

Within 30 days from the date of delivery, U.S. Solid will either work with you to get your product working with the use of replacement parts, replace the product after receiving the returned defective machine, or accept a return for a full refund.

After the first 30 days but still within 1 year from the date of delivery, U.S. Solid will send new or refurbished replacement parts at no charge, so you can repair the product if necessary.



Environment protection first!

- Your appliance contains valuable materials which can be recovered or recycled.
- Leave it at a local civic waste collection point.