


Output interface

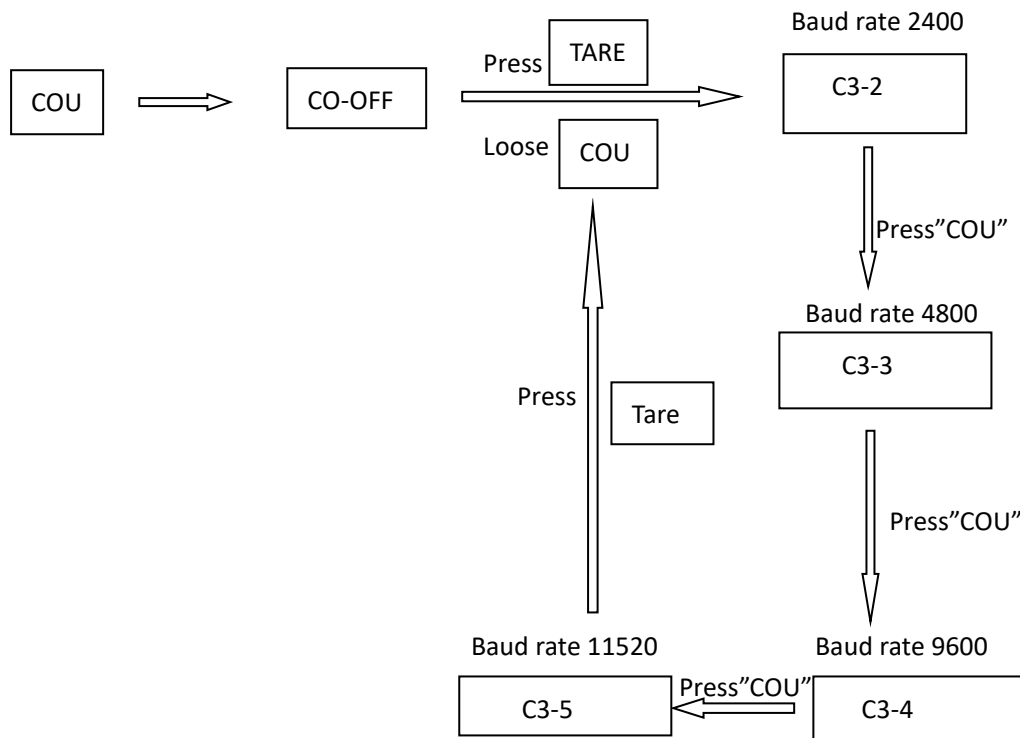

RS-232C interface is installed on to the scale.

Electronic scale's connection orifice as below.

Scale (nine cores)

Microkit (nine cores)

RXD (Input) 2..... 3

TXD (Output) 3.....2

GND (Earth) 5.....5

B). (1) Default Band rate of connection orifice is 9600bps.

(2) Data format, 10 bits, 0 as start bit, 1 as stop bit, 8 digits (ASCII code)

(3) No odd and even numbers adjusting.

C). Output data format.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
type	Space	Space or *	±	data	data	data	data	data	Data or dot	Data or dot	data	Unit1	Unit2	end	return

