



STRAPPING DISPENSER

Manual No. 9474




POLYPROPYLENE(PP) STRAPPING DISPENSER



MODEL	USS-ESM00009
APPLICABLE CORE SIZE OF PET STRAPPING	8 INCHES
MACHINE SIZE	21.6 inches x 20 inches x 39.3 inches
MACHINE WEIGHT	26.4IB
PACKAGE SIZE	20.4 inches x 20.4 inches x 20.8 inches
PACKAGE WEIGHT	29.7IB

INSTALLATION


1. Install the wheel on the base. Next, snap the snap ring on the outside of the wheel with the snap ring pliers from the kit bag. Insert the anti-skid groove into the hole in the bottom of the dispenser.

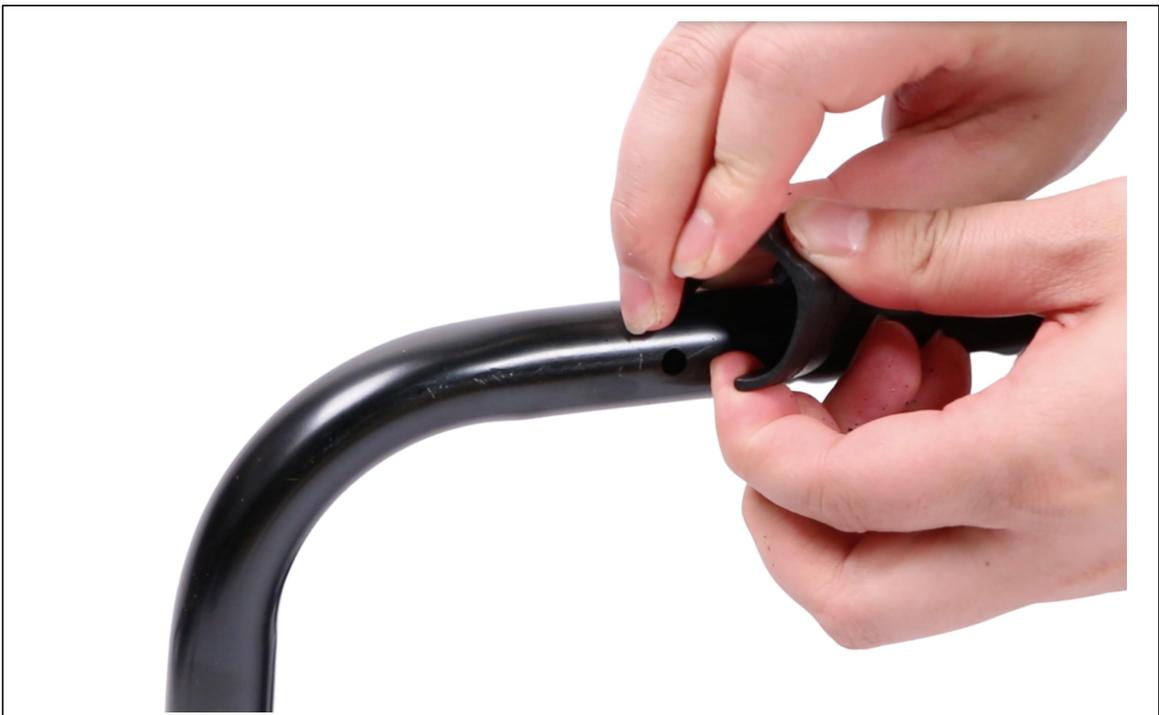

2.Install the handle onto the bracket. Tighten all the screws on the bracket.



3. Install the brake on the handle and fix it with a circlip.

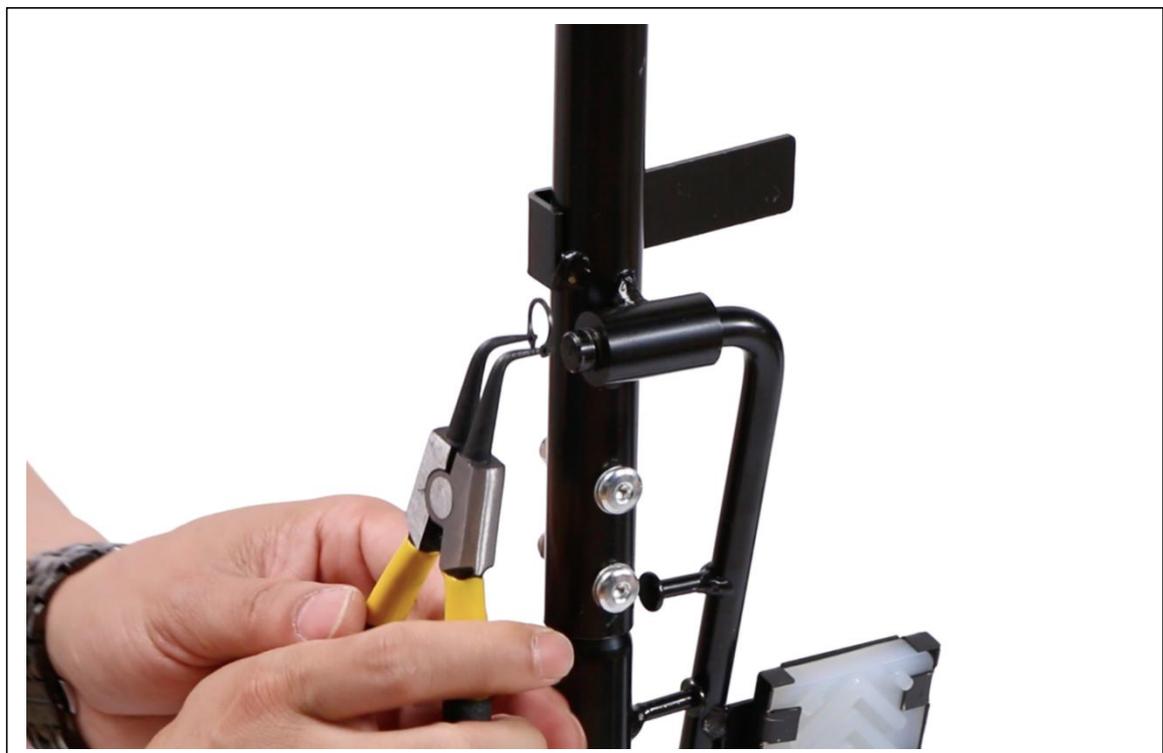


4. Hang the ends of the spring between the handle and the brake respectively as illustrated in the image.




5. Insert a screw into the shaft, then select the disc in the picture. Insert the shaft and screw onto the disc. Insert another screw in the opposite hole to secure the shaft to the disc. It will be disassembled later, so it only needs to be tightened slightly.



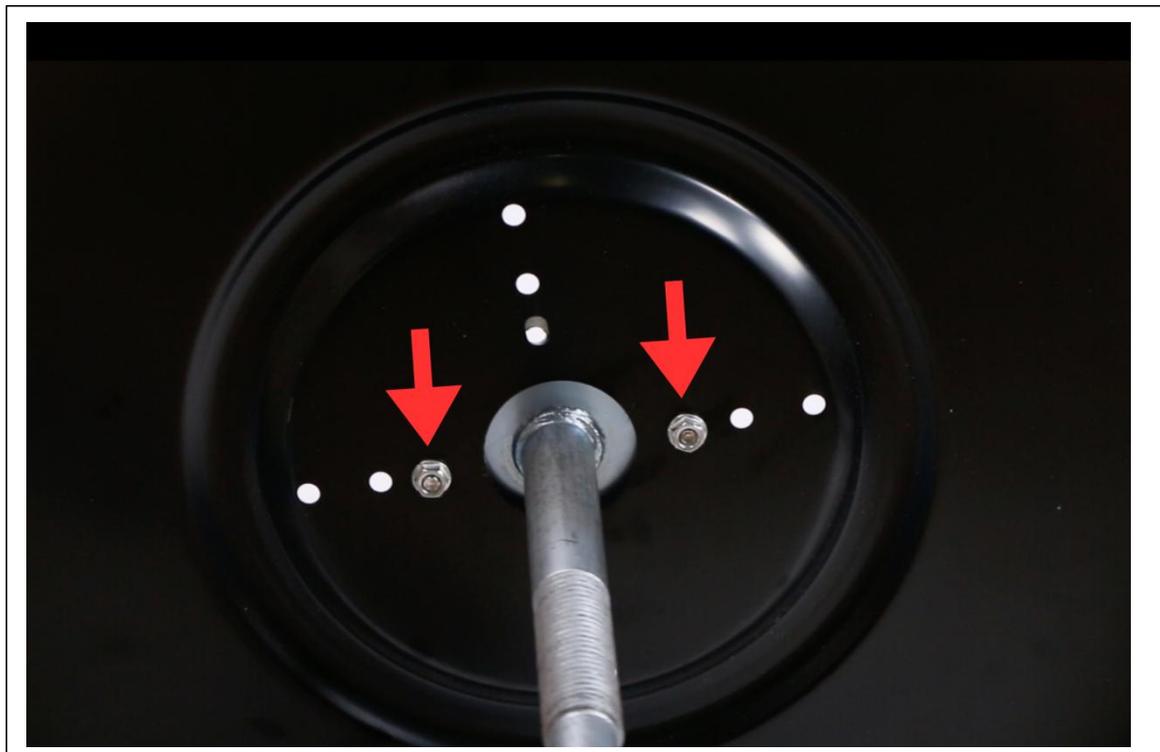

6. Fix 2 right-angle iron plates to the turntable with screws.

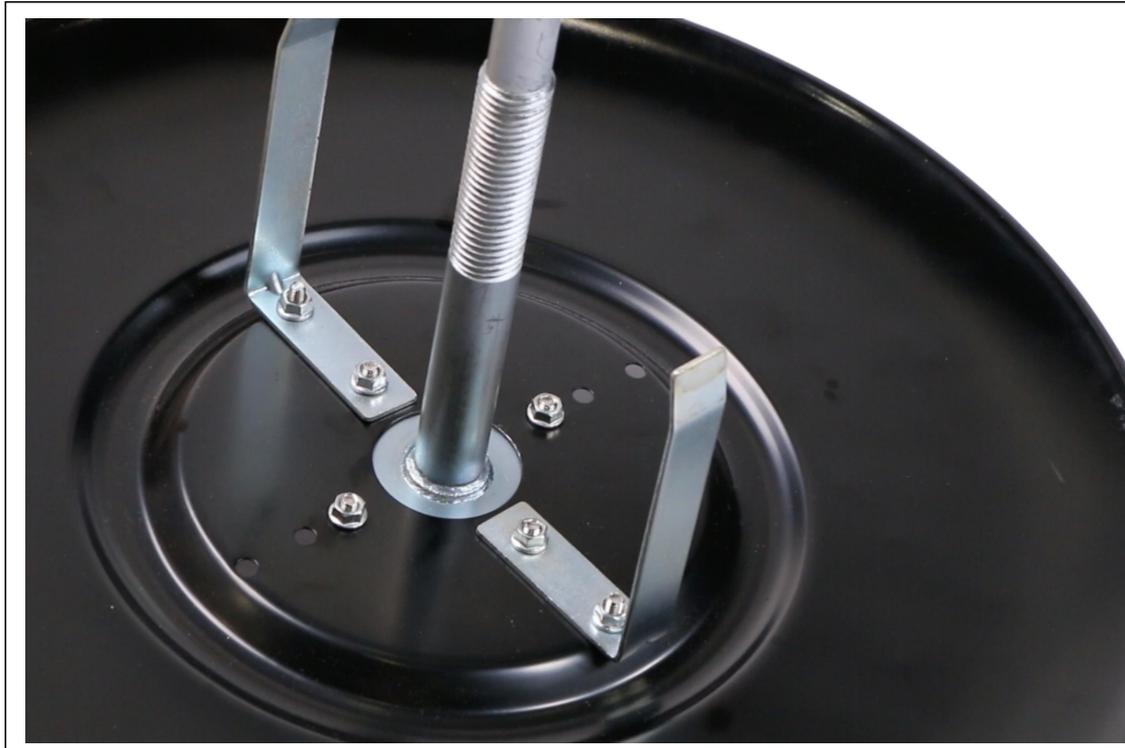


7. Remove the screws that were used to fix the turntable before. Install the other two right-angle fixing iron blocks following the same approach as the previous step.



8. Secure the small black disc to the other turntable with four screws.



9. Insert the strap onto the turntable with 4 right-angle fixing plates. Attach the other turntable. Finally, tighten it with a plastic retainer.

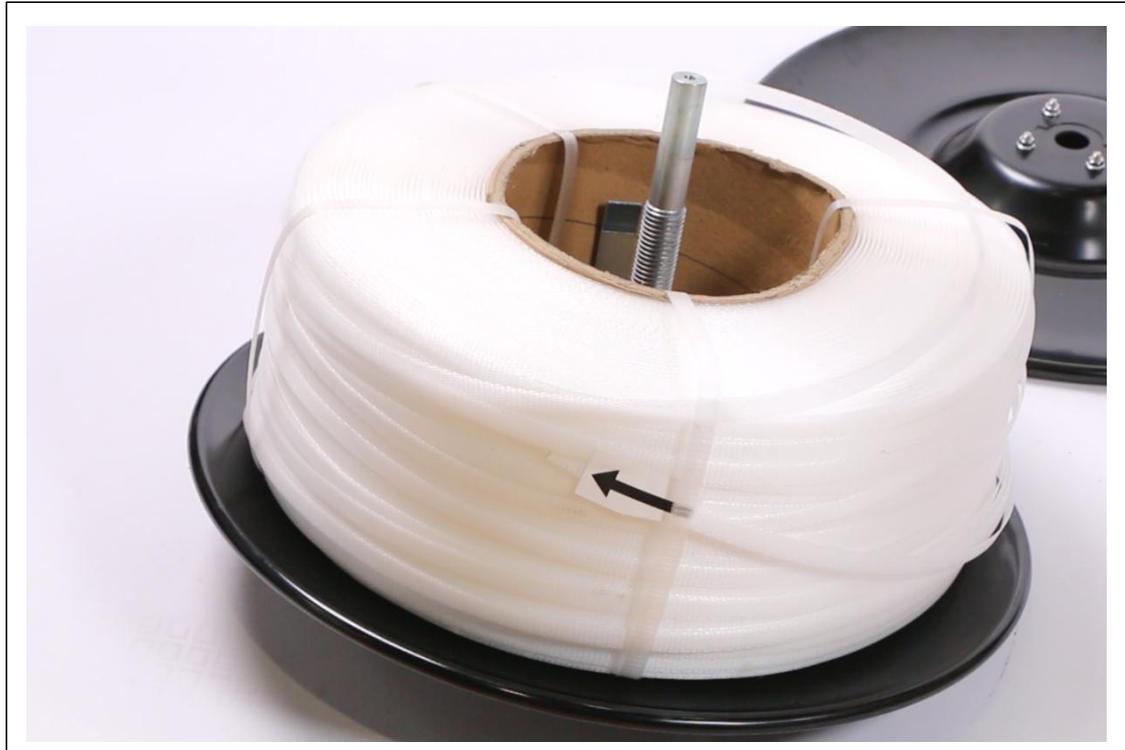



10. Lift the brake slightly, and then clamp the shafts at both ends of the packing tape to the fixed points on the cart.



11. Cut the fixing rope from the packing belt and insert the strap into the brake. When using, please pull the belt up together with the brake rod, and then pull out the packing belt. If the strap is lowered, it will be held in place so that it cannot be pulled out.



12. Snap the toolbox onto the ends of the reel handlebar. You can now push the reel cart and begin packing.



Contact

Feel free to visit our website:

www.ussolid.com

You can also email us at: service@ussolid.com