



MANUAL STRAPPING TOOLS

MANUAL NO. 12441

SKU:JFESM00049



SCAN FOR VIDEO TUTORIAL




FIND QUICK ANSWERS



OPERATION INSTRUCTION

1. As shown in the picture, put the strapping on the bag box, insert the buckle into the packaging strap. Then hold the handle with the right hand, press down the handle, place the strapping under the tooth plate and the knife body, the end of the strapping should exceed the tool, and loosen the handle.

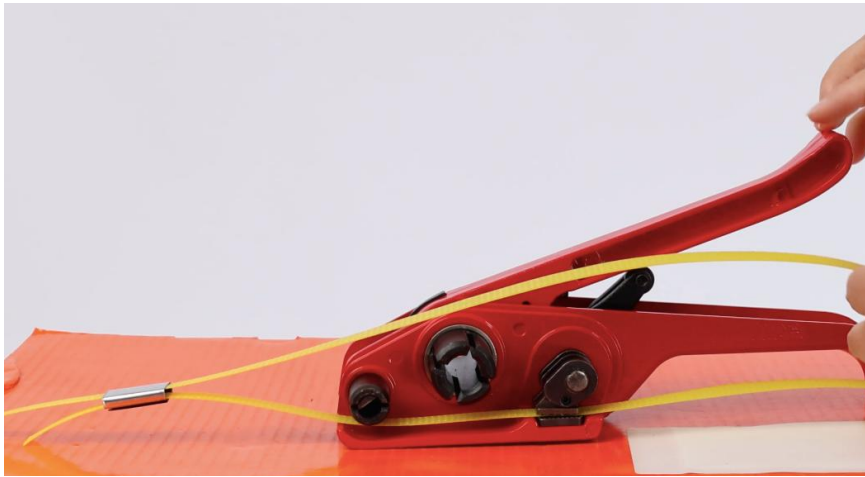


2. Slide the strapping into the cutter groove and spindle groove.



3. Hold the tensioner with your left hand and swing the handle back and forth with your right hand until the strapping is pulled tight.



4. Place the sealer tool fully open over the buckle, then close the handle so that the buckle is fully clamped, then remove the sealer tool.

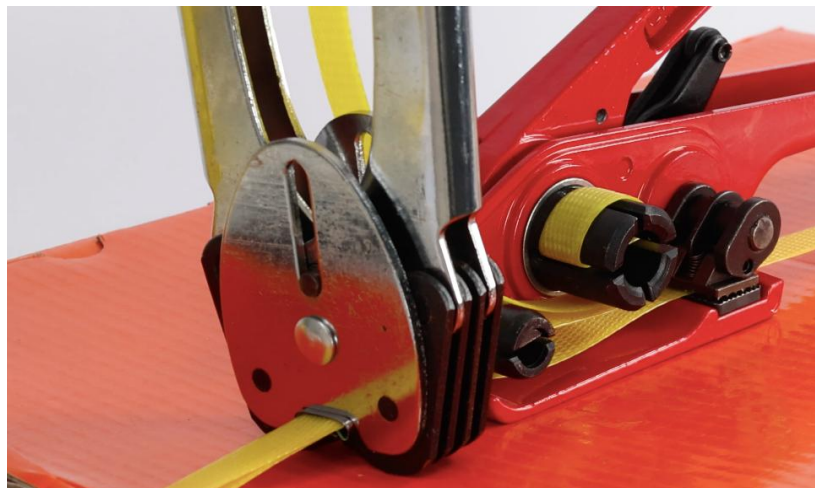

5. Press the handle of the tensioner to cut the strapping, and press the handle to move the tool to the right until it is removed from the strapping.



Contact

Feel free to visit our website: www.ussolid.com

You can email us at service@ussolid.com